




Pallet Stretch Wrapper 1-GPPW-1650

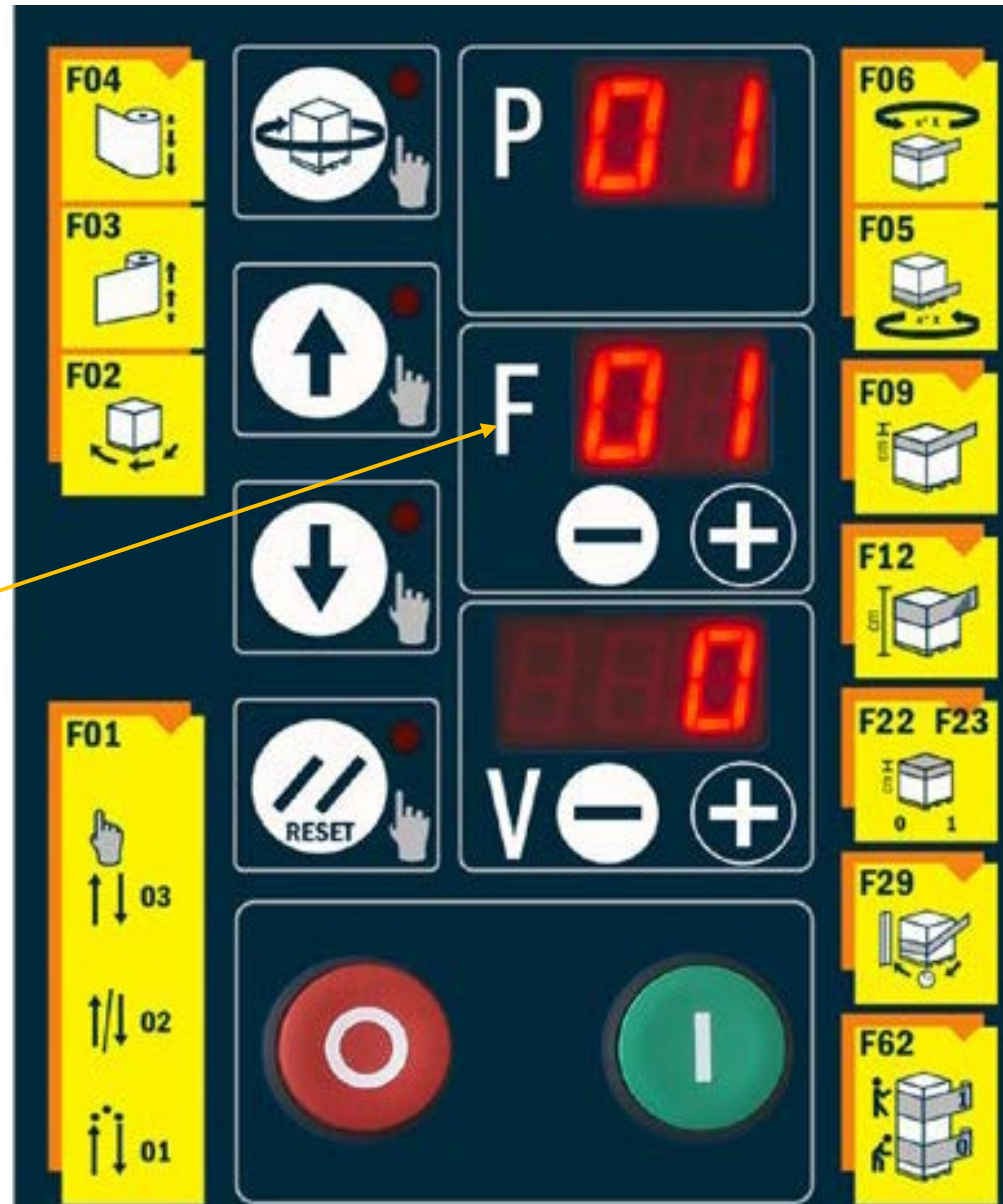

Carriage Speed Up

Carriage Speed Down

Table rotation speed

F = Function e.g., F05 = Number of bottom wraps...+ or - to set different parameters

F03 – Manual. Use Up & Down arrows to drive carriage.

Quick wrap, Up & Down

Wrap Up, Wrap Down.

Number of Top Wraps.

Number of Bottom Wraps.

Overlap at the top of Pallet.

Height at which the carriage stops rising (photocell is disabled).

Wrapping cycle with pause F22 = V0 excluded
F22 = V1 Included (for putting top sheet on)
F23 = Carriage descent by cm

Film extraction timer with light tension at the beginning of the Cycle – (Applying Edge boards)

Film Carriage stop halfway up mast after finishing cycle = V1, at bottom = V0