

PALLET WRAPPER INSTALLATION



1. Rest the top end of the mast on a small stool while you insert the hinge.



2. Insert the main hinge pin.





3. Insert split pin in hinge pin before lifting the mast



4. Mast ready to be lifted.






5. Main Mast Hex head bolts x 6




6. Plug in these 2 plugs once the mast is up and bolted down.

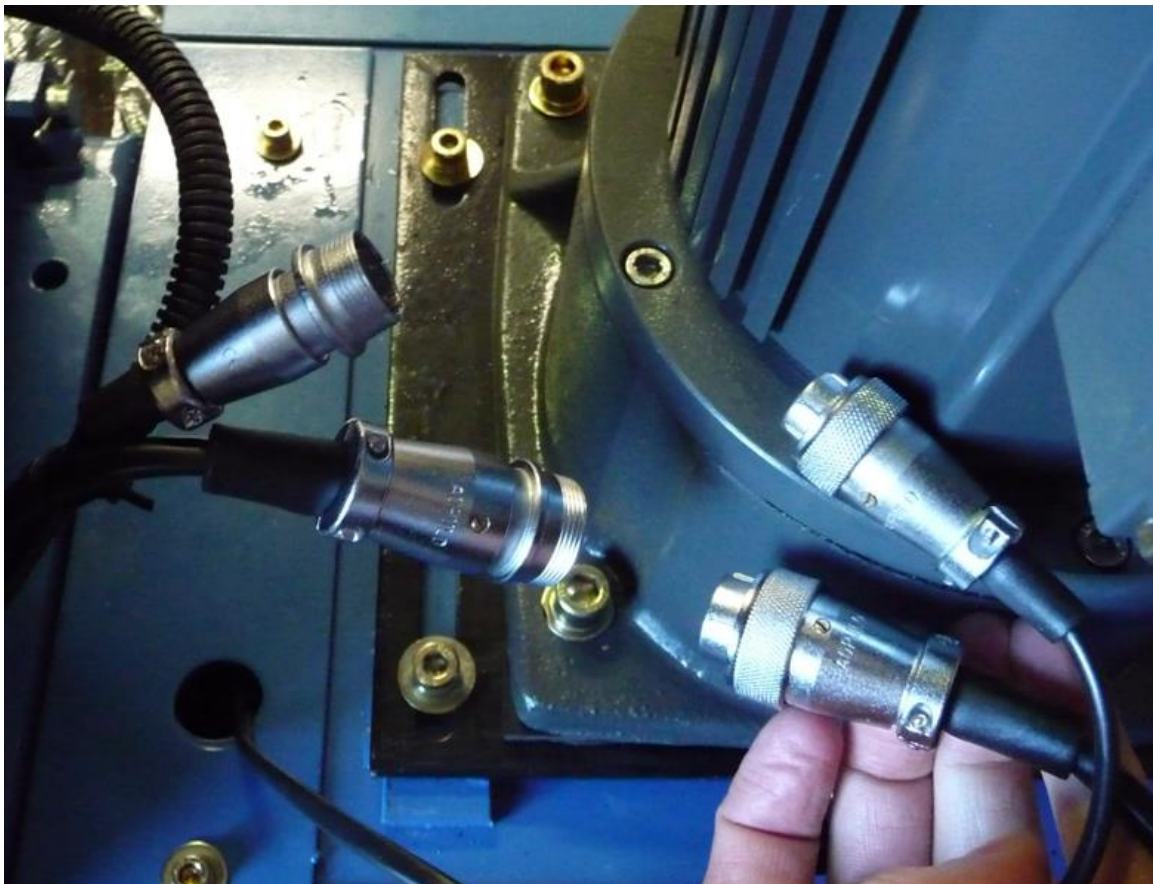



7. Turntable plug and small Turntable counter switch plug.

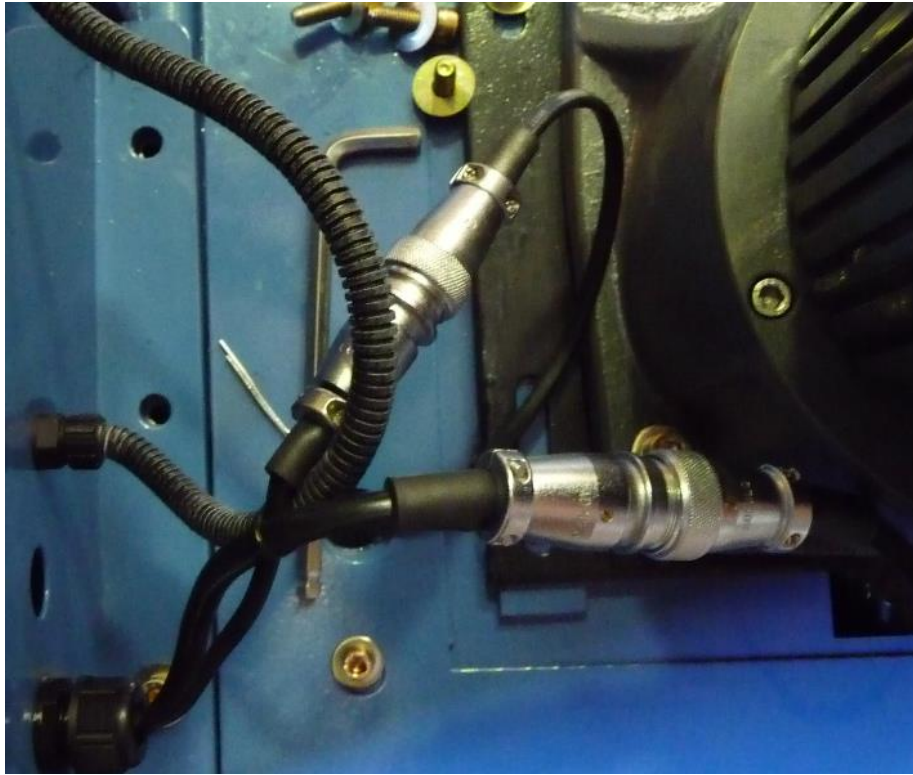


8a. Put cable in slot before mounting the film carriage



8b. Film carriage hex head bolts x 4




9. Tightening the film carriage bolt.

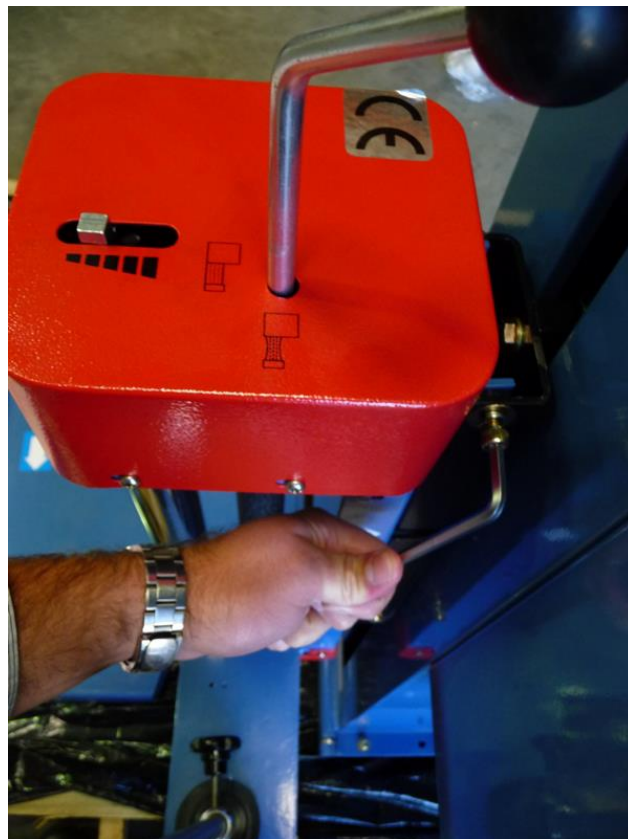



10. Film Carriage plug for Photocell eye.

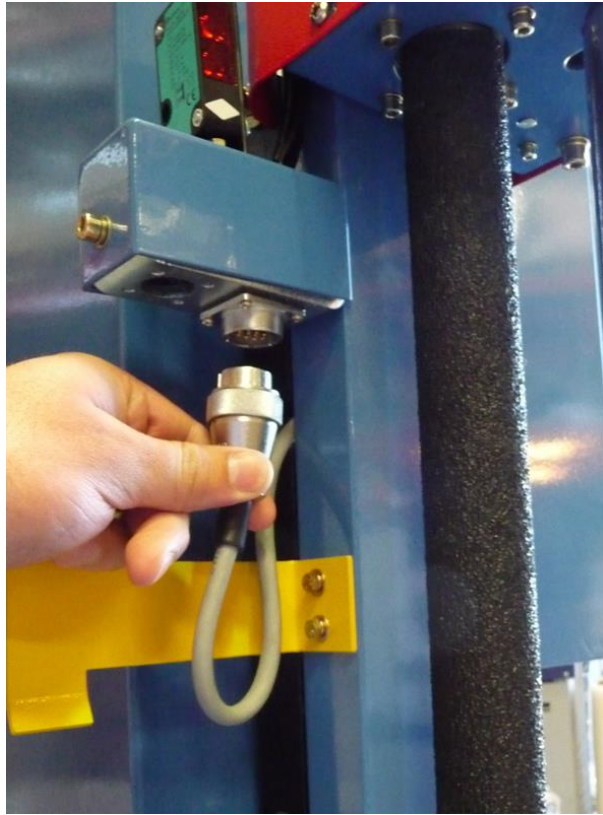

11. Motor cover in place with 4 x hex bolts – last step once mast is up...

